


## 12. Rename

This function changes the name of the file stored in the memory.

The operating procedure is as indicated below.


- (1) Press function key [F4] (RENAME).

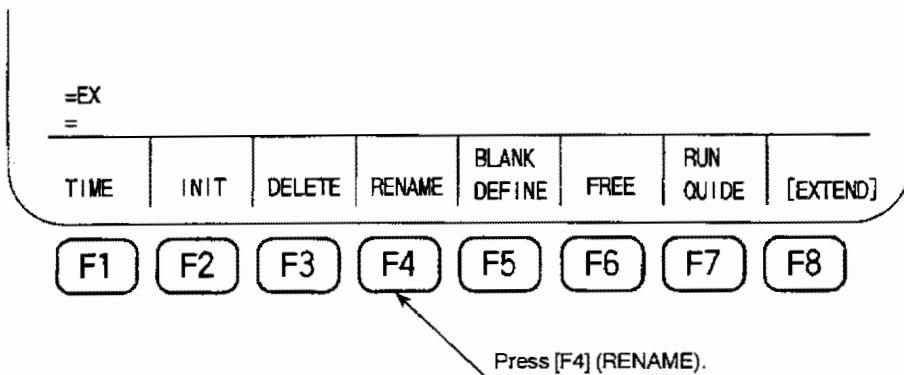

The screen changes to the directory-selection-based file operation screen and the following is displayed on the screen.

RENAME

R

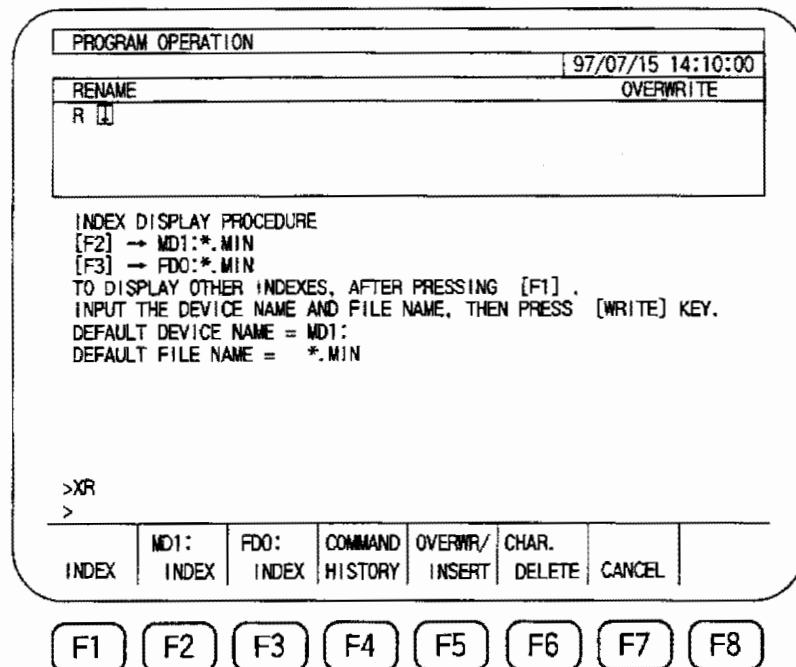

- (2) Following "R", first key in the current file name and then key in the new file name with a comma "," placed between them.


Example: R ↴ SHIL1,SHIL2      The file name is SHIL1.MIN is changed to SHIL2.MIN.

R ↴ SHIL1.SUB,SHIL1.SSB      The file name SHIL1.SUB is changed to SHIL1.SSB.

R ↴ SHIL1.SUB,SHIL2.SUB      The file name SHIL1.SUB is changed to SHIL2.SUB.

- (3) Press the WRITE key.

This completes file name change operation.

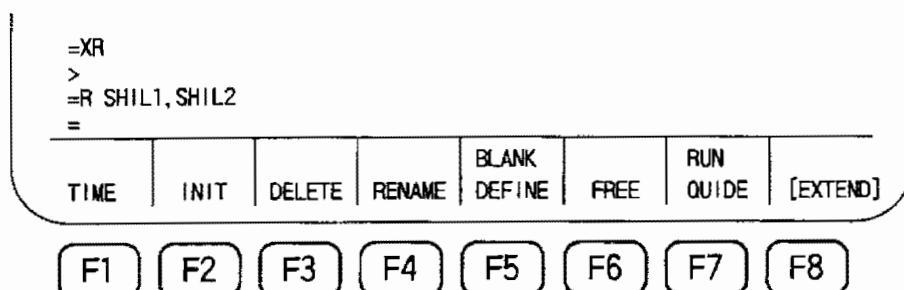

- [Supplement] 1. When the current file name specified is not found, the message "no file" is displayed on the command line and renaming operation terminates.  
2. When the new file name specified already exists in the memory, the message "file exists" is displayed on the command line and renaming operation terminates.  
3. Symbols "?"and "\*" cannot be used to specify a file name. The error message "file name error" will be displayed on the screen if specified.